


Wireless Telephone Quick Reference Guide

Nortel Meridian
M2616 Station Set

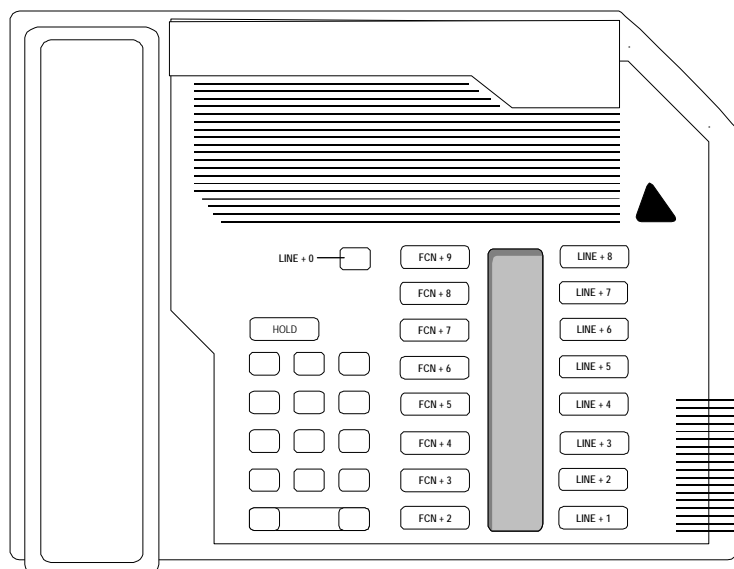


M2616 Station Set

Pressing **LINE** followed by a digit (**1-7**) on the Wireless Telephone is equivalent to pressing one of the line keys on the M2616 (Keys 0-6).

LINE + 8 is reserved for local programming, as on the station set. **LINE + 0** is equivalent to the **RLS** button.

Pressing **FCN** followed by a digit (**2-9**) on the Wireless Telephone is equivalent to pressing one of the dual memory buttons on the M2616 (Keys 8-15).

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	XFER	
FCN + 3	CONF	
FCN + 4	LAST NO	
FCN + 5	FWD	
FCN + 6	MSG	
FCN + 7	PICK	
FCN + 8	RING AGAIN	
FCN + 9	EXIT MENUS	
LINE + 0	RLS	

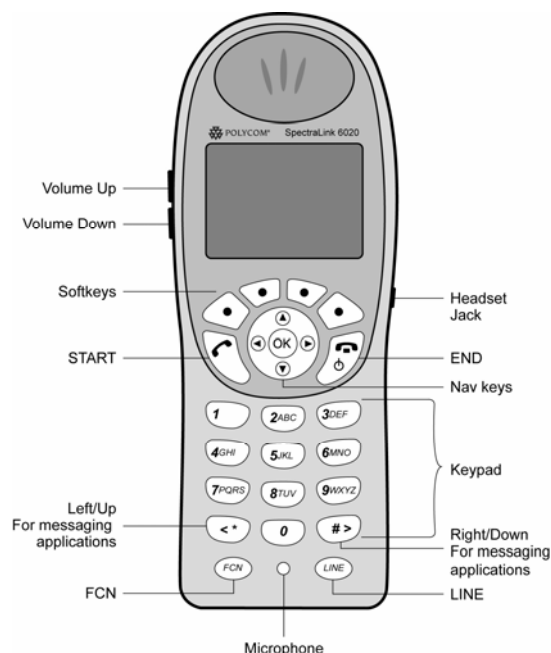

SpectraLink 6020 Wireless Telephone

On/Off Press and hold **END**. Two chirps on, one chirp off

Make a call Press **START** to get dial tone.

Hang up Press **END**. Be sure to do this at the end of each call.

Answer call Press **START**. Line indicator comes on steady when the call is answered.

Answer second call Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.

Hold Press **HOLD**

Take off Hold Press **LINE** followed by the digit for the line on hold, which will be flashing.

Mute On/Off Press the **MUTE** softkey.

Function Pressing **FCN** while off hook allows you to scroll through menu screens.

User Options Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

